



SUNSHINE AIR REPAIRS, LLC

Approved Capabilities List

FAA Part 145 Certified Repair Station | Certificate No. 54RR449D

EASA.145.6835 • UK.145.50900 • CAAN AMO/VAL/255/2025 • CAGE Code: 9XEX9

1101

Total CAP Entries

554

Accessories

524

Instruments

15

Airframe

8

Radio

Approved component repair capabilities | OEM data, traceable records, and 8130-3 release available

Regulatory Approvals Held

FAA	EASA	UK-CAA	CAAN
Federal Aviation Administration	European Union Aviation Safety Agency	United Kingdom Civil Aviation Authority	Civil Aviation Authority of Nepal
54RR449D	EASA.145.6835	UK.145.50900	AMO/VAL/255/2025



CUSTOMER REFERENCE

Capability Snapshot

1101

Total Entries

554

Accessories

524

Instruments

15

Airframe

8

Radio

Regulatory Approvals

Regulatory approvals held: FAA Part 145 Repair Station with EASA, UK-CAA, and CAAN references shown for customer confidence and quick vendor screening.

Coverage

Accessory, instrument, airframe, and radio capabilities are organized by part number so customers can search the PDF directly during RFQ review.

Release

Work is performed using applicable OEM technical data with traceable repair records and FAA 8130-3 release support where applicable.

Best Use

Use this public list to confirm likely capability, then send the part number, dash number, and available tag/history for quote confirmation.

Contents



Accessories

554 entries

p. 4-20

Airframe

15 entries

p. 21-21

Instruments

524 entries

p. 22-37

Radio

8 entries

p. 38-38

Accessories

554 entries

Accessories

PART NUMBER	DESCRIPTION
10-60772-4	Aural Warning
60-1755-3	Power Supply
20032-2	AC Generator
1356-583314	Accumulator
1356-583315	Accumulator
1356-583317	Accumulator
20627	Switch
30-0863-1	Aircraft Nav. Light
30-0863-10	Aircraft Nav. Light
30-0863-11	Aircraft Nav. Light
30-0863-12	Aircraft Nav. Light
30-0863-2	Aircraft Nav. Light
30-0863-3	Aircraft Nav. Light
30-0863-4	Aircraft Nav. Light
30-0863-5	Aircraft Nav. Light
30-0863-6	Aircraft Nav. Light
30-0863-7	Aircraft Nav. Light
30-0863-8	Aircraft Nav. Light
30-0863-9	Aircraft Nav. Light
AR 850	Altitude Reporter
30-0876-1	Anti Collision Flashtube, Strobe
30-0876-10	Anti Collision Flashtube, Strobe
30-0876-11	Anti Collision Flashtube, Strobe
30-0876-12	Anti Collision Flashtube, Strobe
30-0876-13	Anti Collision Flashtube, Strobe
30-0876-14	Anti Collision Flashtube, Strobe
30-0876-15	Anti Collision Flashtube, Strobe
30-0876-16	Anti Collision Flashtube, Strobe
30-0876-17	Anti Collision Flashtube, Strobe
30-0876-18	Anti Collision Flashtube, Strobe
30-0876-19	Anti Collision Flashtube, Strobe
30-0876-2	Anti Collision Flashtube, Strobe

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
30-0876-20	Anti Collision Flashtube, Strobe
30-0876-21	Anti Collision Flashtube, Strobe
30-0876-22	Anti Collision Flashtube, Strobe
30-0876-23	Anti Collision Flashtube, Strobe
30-0876-24	Anti Collision Flashtube, Strobe
30-0876-25	Anti Collision Flashtube, Strobe
30-0876-3	Anti Collision Flashtube, Strobe
30-0876-4	Anti Collision Flashtube, Strobe
30-0876-5	Anti Collision Flashtube, Strobe
30-0876-6	Anti Collision Flashtube, Strobe
30-0876-7	Anti Collision Flashtube, Strobe
30-0876-7	Anti Collision Flashtube, Strobe
30-0876-8	Anti Collision Flashtube, Strobe
30-0876-9	Anti Collision Flashtube, Strobe
10-60772-4	Aural Warning Device
8190026	Autofeather Pressure switch
DHCSC70020-5	Pressure Switch
DHCSC70020-11	Autofeather Pressure switch
DHCSC70020-13	Autofeather Pressure switch
30081-001	Auxiliary DC Starter Generator
30081-010	Auxiliary DC Starter Generator
M5861AD-6B	Axial Fan
M6921-W1B	Axial Fan
M6921W-1B	Axial Fan and Motor
C6E1080-3	Beta Prox. Sensor Assembly
3022566	Bleed Air Valve
3029174	Bleed Air Valve
3075033-01	Bleed Air Valve
3011765	Bleed Valve
3022095	Bleed Valve
3024060	Bleed Valve
3075033-01	Bleed Valve
3100829-01	Bleed Valve
3100829-03	Bleed Valve

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
3117032-01	Bleed Valve
3123122-01	Bleed Valve
3123123-01	Bleed Valve
320295-1	Bleed Valve
320295-1E	Bleed Valve
320295-1F	Bleed Valve
320295-1H	Bleed Valve
160-011	Booster Pump
160-065	Booster Pump
RR12830A	Booster Pump
C6NF1106-25	Box Assy Elect. C/LTS
C6NF1106-9	Box Assy Elect. C/LTS
C6L1021-1 Series	Bracket
030-17000	Brake Assembly
30-170	Brake Assembly
9550377-2	Brake Assembly
9550377-4	Brake Assembly
9550377-4R	Brake Assembly
C6HF1037-1	Brake Valve LH
C6HF1036-1	Brake Valve RH
2650157	Check Valve
C6NF1117 Series	Beta Back Up Box
C6NF1144-3	Control Pump Changer
C6PF1166 Series	Switch
51539-014A	DC Control Unit
200SGL111Q	DC Starter Generator
200SGL111Q-2	DC Starter Generator
200SGL111Q-3	DC Starter Generator
200SGL112Q	DC Starter Generator
200SGL114Q	DC Starter Generator
200SGL115Q	DC Starter Generator
200SGL115Q-2	DC Starter Generator
200SGL117Q	DC Starter Generator
200SGL118Q	DC Starter Generator

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
200SGL119Q	DC Starter Generator
200SGL119Q-2	DC Starter Generator
200SGL120Q	DC Starter Generator
200SGL121Q	DC Starter Generator
200SGL124Q	DC Starter Generator
200SGL129Q	DC Starter Generator
200SGL129Q-1	DC Starter Generator
200SGL129Q-3	DC Starter Generator
200SGL129Q-4	DC Starter Generator
200SGL129Q-5	DC Starter Generator
200SGL129Q-8	DC Starter Generator
200SGL130Q	DC Starter Generator
200SGL131Q	DC Starter Generator
200SGL131Q-2	DC Starter Generator
200SGL131Q-5	DC Starter Generator
200SGL132Q	DC Starter Generator
200SGL132Q-2	DC Starter Generator
200SGL132Q-3	DC Starter Generator
200SGL132Q-4	DC Starter Generator
200SGL132Q-5	DC Starter Generator
200SGL142Q	DC Starter Generator
200SGL144Q	DC Starter Generator
200SGL145Q	DC Starter Generator
200SGL147Q	DC Starter Generator
200SGL147Q-2	DC Starter Generator
200SGL147Q-3	DC Starter Generator
200SGL151Q	DC Starter Generator
200SGL153Q	DC Starter Generator
23046-001	DC Starter Generator
23046-007	DC Starter Generator
23046-007M	DC Starter Generator
23046-009	DC Starter Generator
23046-017	DC Starter Generator
23046-019	DC Starter Generator

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
23046-020	DC Starter Generator
23046-028	DC Starter Generator
23048-001	DC Starter Generator
23048-004	DC Starter Generator
23048-004M	DC Starter Generator
23048-004T	DC Starter Generator
23048-004TM	DC Starter Generator
23048-006	DC Starter Generator
23048-008	DC Starter Generator
23048-009	DC Starter Generator
23048-016	DC Starter Generator
23048-017	DC Starter Generator
23048-018	DC Starter Generator
23048-020	DC Starter Generator
23048-021	DC Starter Generator
23048-022	DC Starter Generator
23048-023	DC Starter Generator
23048-027	DC Starter Generator
23048-028	DC Starter Generator
23048-046	DC Starter Generator
23078 Series	DC Starter Generator
23080-013	DC Starter Generator
23080-013A	DC Starter Generator
23080-014	DC Starter Generator
23080-014A	DC Starter Generator
23080-13B	DC Starter Generator
C6NF1297-1	Dimming Control Box
C6NF1297-5	Dimming Control Box
C6NF1297-9	Dimming Control Box
14-97862-02	Electric Windshield Wiper Motor
398648-1-1	Electric Temp Control Valve 2 1/2 in
398648-1-2	Electric Temp Control Valve 2 1/2 in
398648-2-1	Electric Temp Control Valve 2 1/2 in
10-0055-1	Emergency Exit Light

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
10-0055-11	Emergency Exit Light
10-0055-13	Emergency Exit Light
10-0055-15	Emergency Exit Light
10-0055-17	Emergency Exit Light
10-0055-19	Emergency Exit Light
10-0055-21	Emergency Exit Light
10-0055-25	Emergency Exit Light
10-0055-3	Emergency Exit Light
10-0055-5	Emergency Exit Light
10-0055-7	Emergency Exit Light
10-0055-9	Emergency Exit Light
501-1712-01	Emergency Power Supply
501-1712-02	Emergency Power Supply
501-1712-03	Emergency Power Supply
501-1712-04	Emergency Power Supply
501-1719-01	Emergency Power Supply
501-1719-02	Emergency Power Supply
C6SC1107-1	Exhaust Stack LH
C6SC1107-5	Exhaust Stack LH
C6SC1107-3	Exhaust Stack RH
C6SC1107-7	Exhaust Stack RH
60-3844 Series	Exit Light Power Supply
810207 Series	Fan Inlet Diffuser
3029267	Filter
17343-62-300	Fire Detector
17343-62-450	Fire Detector
C6Cf1080-1	Flap Elevator Ball Screw
C6CF1080-3	Flap Elevator Ball Screw
SKA104-1	Flap Sector Valve
SKA104-3	Flap Sector Valve
SKA104-3A	Flap Sector Valve
72266-3	Fuel Pump
72368-1	Fuel Pump
71383 Series	Fuel Booster Pump

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
52-2145-002	Fuel Filter
52-2889-002	Fuel Filter
9133-25-B1	Fuel Flow Transmitter
9133-54-B1	Fuel Flow Transmitter
391087-03081	Fuel Probe
391087-03082	Fuel Probe
391087-03083	Fuel Probe
391087-03084	Fuel Probe
391087-03085	Fuel Probe
391088-002	Fuel Probe
391088-003	Fuel Probe
391088-004	Fuel Probe
391088-005	Fuel Probe
391088-006	Fuel Probe
85861	Fuel Pump
1D2-20	Fuel Pump
72390-2	Fuel Pump
15328	Fuel Shutoff Solenoid Valve
15410	Fuel Shutoff Solenoid Valve
C6CF1174-1	Gearing Mechanism Assembly
C6CF1174-3	Gearing Mechanism Assembly
51539-012 Series	Generator Control Unit
51539-014A	Generator Control Unit
51549-001A	Generator Control Unit
EVAC2322C2	Ground Cooling Fan
914-8D27	Hand Pump
915-8D27	Hand Pump
916-8D27	Hand Pump
AN6201-1	Hand Pump
AN6248-2	Hand Pump
100-689-4	Hydraulic Pump & Motor
100-689-3	Hydraulic Pump and Motor
2803P-455L (C6SC1063-3)	Ice Door Indicator
C6CT1010-1	Jack Screw Drive

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
C6CT1010-3	Jack Screw Drive
G5400 Series	Landing Light
167-5	Lift Detector
L10-20	Linear Actuator
SYLC-51836	Linear Actuator
SYLC-51836-1	Linear Actuator
SYLC-51836-10	Linear Actuator
MGE23 Series	Motor Generator Assembly
30-1588 Series	Navigational Light
710300-25	Nose Landing Gear
71-100-35	Nose Landing Gear
71-300-27	Nose Landing Gear
71-300-29	Nose Landing Gear
71-300-35	Nose Landing Gear
71-300-37	Nose Landing Gear
71-100-31	Nose Landing Gear with Actuator
71-100-33	Nose Landing Gear with Actuator
3567749-1501	Oil Pressure Transmitter
3567749-4001	Oil Pressure Transmitter
3567749-4003	Oil Pressure Transmitter
3567749-6001	Oil Pressure Transmitter
3567749-6505	Oil Pressure Transmitter
3567749-7103	Oil Pressure Transmitter
3567749-9401	Oil Pressure Transmitter
3567749-9402	Oil Pressure Transmitter
3567749-9502	Oil Pressure Transmitter
3567749-9601	Oil Pressure Transmitter
7749-41A5-1	Oil Pressure Transmitter
10552 Series	Oil to Heat Exchange
MS28034-1	Oil Temperature Sensor
60-1755-1	Power Supply
60-2799-1	Power Supply
60-2799-1	Power Supply
60-2799-11	Power Supply

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
60-2799-13	Power Supply
60-2799-13	Power Supply
60-2799-3	Power Supply
60-2799-3	Power Supply
60-2799-5	Power Supply
60-2799-5	Power Supply
60-2799-7	Power Supply
60-2799-7	Power Supply
60-2799-9	Power Supply
60-2799-9	Power Supply
60-3844 Series	Exit Light Power Supply
8TJ88GAC Series	Power Supply
8TJ88GAD3 Series	Power Supply
8190026	Pressure Switch
1115P48-15	Pressure Switch
1115P48-17	Pressure Switch
1115P48-21	Pressure Switch
1115P48-23	Pressure Switch
1115P48-7	Pressure Switch
1G177-15	Pressure Switch
1G177-7	Pressure Switch
1G177-9	Pressure Switch
1G198	Pressure Switch
1G198-2	Pressure Switch
1G198-3	Pressure Switch
6607P9-53	Pressure Switch
6607P9-6	Pressure Switch
6607P9-6A	Pressure Switch
98087-1115P48-15	Pressure Switch
DHCSC70019-15	Pressure Switch
DHCSC70019-17	Pressure Switch
DHCSC70019-21	Pressure Switch
DHCSC70019-23	Pressure Switch
DHCSC70019-7	Pressure Switch

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
DHCSC70020-5	Pressure Switch
318-02020	Pressure Transmitter
418-01064	Pressure Transmitter
1D2-17	Pump
12XRP12A1	Relay
MS24171-D1	Relay
MS24172-D1	Relay
XRP12A	Relay
MS25035-1	Relay
A-700 AAP	Relay, Rev, Current
A-700 AP	Relay, Rev, Current
A-700 APM	Relay, Rev, Current
A-701D	Relay, Rev, Current
68400A36-24	Rotating Warning Light
68400A43-24	Rotating Warning Light
C8400A31-24	Rotating Warning Light
G8400A10-24	Rotating Warning Light
G8400A12	Rotating Warning Light
G8400A12-12	Rotating Warning Light
G8400A13-24	Rotating Warning Light
G8400A14-24	Rotating Warning Light
G8400A15-24	Rotating Warning Light
G8400A21-24	Rotating Warning Light
G8400A22-24	Rotating Warning Light
G8400A23-24	Rotating Warning Light
G8400A24	Rotating Warning Light
G8400A24-24	Rotating Warning Light
G8400A3-12	Rotating Warning Light
G8400A36-24	Rotating Warning Light
G8400A37-24	Rotating Warning Light
G8400A41-24	Rotating Warning Light
G8400A45-12	Rotating Warning Light
G8400A47-24	Rotating Warning Light
G8400A49-24	Rotating Warning Light

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
G8400A8-12	Rotating Warning Light
G8400A8-24	Rotating Warning Light
G8400A9-24	Rotating Warning Light
G8400All-24	Rotating Warning Light
GS400A39-24	Rotating Warning Light
G-9950 Series	Navigational Light
71-300-1	Shock Strut Assembly
71-300-11	Shock Strut Assembly
71-300-15	Shock Strut Assembly
71-300-17	Shock Strut Assembly
71-300-19	Shock Strut Assembly
71-300-21	Shock Strut Assembly
71-300-23	Shock Strut Assembly
71-300-25	Shock Strut Assembly
71-300-27	Shock Strut Assembly
71-300-29	Shock Strut Assembly
71-300-3	Shock Strut Assembly
71-300-31	Shock Strut Assembly
71-300-33	Shock Strut Assembly
71-300-5	Shock Strut Assembly
71-300-7	Shock Strut Assembly
71-300-9	Shock Strut Assembly
26440051	Shutoff Valve
U9500	Solenoid Fuel Bleed
15-0069-1	Spot Light
15-0069-11	Spot Light
15-0069-13	Spot Light
15-0069-15	Spot Light
15-0069-17	Spot Light
15-0069-19	Spot Light
15-0069-21	Spot Light
15-0069-25	Spot Light
15-0069-3	Spot Light
15-0069-5	Spot Light

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
15-0069-7	Spot Light
15-0069-9	Spot Light
430-M1	Stall Warning Device
28VS200Y-4DH	Static Converter
PC-15	Static Inverter
PC-15B	Static Inverter
PC-15BC	Static Inverter
PC250	Static Inverter
PC250-1A	Static Inverter
PC250-1B	Static Inverter
PC250-1C	Static Inverter
PC250-2A	Static Inverter
PC-17 Series	Static Inverter
PC-251	Static Inverter
PC-251-15A	Static Inverter
PC-251-15B	Static Inverter
PC-251-15C	Static Inverter
PC-251-1C	Static Inverter
PC-251-1D	Static Inverter
PC-251-3A	Static Inverter
PC-251-3B	Static Inverter
PC-251-5A	Static Inverter
PC-251-5B	Static Inverter
PC-251-5C	Static Inverter
PC-350 Series	Static Inverter
5590F1-1	Static Power Inverter
71-190-11B	Steering Actuator Assembly
71-190-13	Steering Actuator Assembly
71-190-15	Steering Actuator Assembly
71-190-7	Steering Actuator Assembly
71-200-11B	Steering Actuator Assembly
71-200-13	Steering Actuator Assembly
71-200-15	Steering Actuator Assembly
71-200-7	Steering Actuator Assembly

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
70029 Series	Strobe Light
70-0075-1	Strobe Light Flasher Supply
26900-X Series	Submerged Fuel Boost Pump
28550-X Series	Submerged Fuel Boost Pump
2CM9AAA6	Tachometer Generator
2CM9AAC6	Tachometer Generator
2CM9AAH4	Tachometer Generator
2CM9AAV6	Tachometer Generator
2CM9AAZ6	Tachometer Generator
2CM9ABE6	Tachometer Generator
2CM9ABH7	Tachometer Generator
2CM9ABK7	Tachometer Generator
2CM9ABY7	Tachometer Generator
2CM9ABZ7	Tachometer Generator
2CM9ACE7	Tachometer Generator
2CM9ACF8	Tachometer Generator
2CM9ACH7	Tachometer Generator
2CM9ADB9	Tachometer Generator
2CM9ADE8	Tachometer Generator
2CM9ADT6	Tachometer Generator
32005-007	Tachometer Generator
32005-008	Tachometer Generator
32005-023	Tachometer Generator
32005-025	Tachometer Generator
32005-026	Tachometer Generator
32005-030	Tachometer Generator
32005-034	Tachometer Generator
32005-037	Tachometer Generator
30-1840-1	Tail light
30-1840-2	Tail light
30-1840-3	Tail light
30-0909-1	Tail Position Flashtube Lights
30-0909-101	Tail Position Flashtube Lights
30-0909-103	Tail Position Flashtube Lights

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
30-0909-107	Tail Position Flashtube Lights
30-0909-201	Tail Position Flashtube Lights
30-0909-203	Tail Position Flashtube Lights
30-0909-207	Tail Position Flashtube Lights
G-9950-1	Tandem Oscillating A/C Nav. Light
G-9950-11	Tandem Oscillating A/C Nav. Light
G-9950-13	Tandem Oscillating A/C Nav. Light
G-9950-15	Tandem Oscillating A/C Nav. Light
G-9950-2	Tandem Oscillating A/C Nav. Light
G-9950-5	Tandem Oscillating A/C Nav. Light
G-9950-7	Tandem Oscillating A/C Nav. Light
G-9950-9	Tandem Oscillating A/C Nav. Light
BYLB51044	Temperature Control Valve
BYLB51045	Temperature Control Valve
217-09261	Torque Pressure Indicator
C6SC1026-1	Torque Pressure Indicator
ST-502H	Torque Pressure Transmitter
418-04024	Torque Pressure Trasmmitter
DH-1030-24-65-CS	Transverter
AV16B1864B	Valve
BYLB9304 Series	Valve Actuator
12040	Valve and Gauge
12149	Valve and Gauge
12199	Valve and Gauge
12056-1	Valve and Gauge
12057-1	Valve and Gauge
12057-3	Valve and Gauge
AV16B1762B	Valve, Shutoff
VR-1010-24-1A	Voltage Regulator
VR-1010-24-2A	Voltage Regulator
90-0180-3	Windshield Wiper System
90-0180-5	Windshield Wiper System
90-0180-7	Windshield Wiper System
XW21160-2	Windshield Wiper System

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
C6HF1020-1	Wing Flap Actuator
C6HF1020-3	Wing Flap Actuator
C6HF1020-5	Wing Flap Actuator
2312M41-8	Wiper Motor
90-0182 Series	Wiper Motor
14-91355-01	Windshield Wiper Converter
14-91355-02	Windshield Wiper Converter
14-91355-03	Windshield Wiper Converter
14-91355-04	Windshield Wiper Converter
14-91355-07	Windshield Wiper Converter
14-91355-12	Windshield Wiper Converter
14-91355-13	Windshield Wiper Converter
14-91355-15	Windshield Wiper Converter
14-91355-16	Windshield Wiper Converter
14-91355-18	Windshield Wiper Converter
14-91355-19	Windshield Wiper Converter
14-91355-21	Windshield Wiper Converter
14-91355-22	Windshield Wiper Converter
14-91355-23	Windshield Wiper Converter
14-91355-24	Windshield Wiper Converter
14-91355-26	Windshield Wiper Converter
14-91355-27	Windshield Wiper Converter
14-91355-28	Windshield Wiper Converter
14-91355-29	Windshield Wiper Converter
14-91355-30	Windshield Wiper Converter
14-91355-32	Windshield Wiper Converter
14-91355-33	Windshield Wiper Converter
14-91355-34	Windshield Wiper Converter
14-91355-35	Windshield Wiper Converter
14-91355-36	Windshield Wiper Converter
14-91355-37	Windshield Wiper Converter
14-91355-39	Windshield Wiper Converter
14-91355-42	Windshield Wiper Converter
14-91355-44	Windshield Wiper Converter

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
14-91355-45	Windshield Wiper Converter
14-91355-46	Windshield Wiper Converter
14-91355-47	Windshield Wiper Converter
14-91355-49	Windshield Wiper Converter
14-91355-50	Windshield Wiper Converter
14-91355-51	Windshield Wiper Converter
14-91355-52	Windshield Wiper Converter
14-91355-53	Windshield Wiper Converter
14-91355-54	Windshield Wiper Converter
14-91355-55	Windshield Wiper Converter
14-91355-56	Windshield Wiper Converter
14-91355-57	Windshield Wiper Converter
14-91355-58	Windshield Wiper Converter
14-91355-59	Windshield Wiper Converter
14-91355-60	Windshield Wiper Converter
14-91355-61	Windshield Wiper Converter
14-91355-62	Windshield Wiper Converter
14-91355-63	Windshield Wiper Converter
14-91355-64	Windshield Wiper Converter
14-91355-65	Windshield Wiper Converter
14-91355-66	Windshield Wiper Converter
14-91355-67	Windshield Wiper Converter
14-91355-68	Windshield Wiper Converter
14-91355-69	Windshield Wiper Converter
14-91355-70	Windshield Wiper Converter
14-91355-72	Windshield Wiper Converter
14-91355-73	Windshield Wiper Converter
14-91355-74	Windshield Wiper Converter
14-91355-75	Windshield Wiper Converter
14-91355-76	Windshield Wiper Converter
14-91355-83	Windshield Wiper Converter
14-91355-85	Windshield Wiper Converter
14-91355-86	Windshield Wiper Converter
14-91355-87	Windshield Wiper Converter

Accessories

Accessories continued

PART NUMBER	DESCRIPTION
14-91355-88	Windshield Wiper Converter
14-91355-89	Windshield Wiper Converter
14-91455-01	Windshield Wiper Converter
14-91455-02	Windshield Wiper Converter
14-91455-05	Windshield Wiper Converter
14-91455-09	Windshield Wiper Converter
14-91455-10	Windshield Wiper Converter
14-91455-11	Windshield Wiper Converter
14-91455-12	Windshield Wiper Converter
14-91455-16	Windshield Wiper Converter
14-91455-17	Windshield Wiper Converter
XW21121-227-90	Wiper Converter