



# SUNSHINE AIR REPAIRS, LLC

## Approved Capabilities List

FAA Part 145 Certified Repair Station | Certificate No. 54RR449D

EASA.145.6835 • UK.145.50900 • CAAN AMO/VAL/255/2025 • CAGE Code: 9XEX9

**1101**

Total CAP Entries

**554**

Accessories

**524**

Instruments

**15**

Airframe

**8**

Radio

Approved component repair capabilities | OEM data, traceable records, and 8130-3 release available

### Regulatory Approvals Held

| FAA                             | EASA                                  | UK-CAA                                  | CAAN                              |
|---------------------------------|---------------------------------------|-----------------------------------------|-----------------------------------|
| Federal Aviation Administration | European Union Aviation Safety Agency | United Kingdom Civil Aviation Authority | Civil Aviation Authority of Nepal |
| <b>54RR449D</b>                 | <b>EASA.145.6835</b>                  | <b>UK.145.50900</b>                     | <b>AMO/VAL/255/2025</b>           |



## CUSTOMER REFERENCE

# Capability Snapshot

**1101**

Total Entries

**554**

Accessories

**524**

Instruments

**15**

Airframe

**8**

Radio

### Regulatory Approvals

Regulatory approvals held: FAA Part 145 Repair Station with EASA, UK-CAA, and CAAN references shown for customer confidence and quick vendor screening.

### Coverage

Accessory, instrument, airframe, and radio capabilities are organized by part number so customers can search the PDF directly during RFQ review.

### Release

Work is performed using applicable OEM technical data with traceable repair records and FAA 8130-3 release support where applicable.

### Best Use

Use this public list to confirm likely capability, then send the part number, dash number, and available tag/history for quote confirmation.

# Contents



---

## Accessories

554 entries

**p. 4-20**

---

## Airframe

15 entries

**p. 21-21**

---

## Instruments

524 entries

**p. 22-37**

---

## Radio

8 entries

**p. 38-38**

---

# Accessories

554 entries

## Accessories

| PART NUMBER | DESCRIPTION                      |
|-------------|----------------------------------|
| 10-60772-4  | Aural Warning                    |
| 60-1755-3   | Power Supply                     |
| 20032-2     | AC Generator                     |
| 1356-583314 | Accumulator                      |
| 1356-583315 | Accumulator                      |
| 1356-583317 | Accumulator                      |
| 20627       | Switch                           |
| 30-0863-1   | Aircraft Nav. Light              |
| 30-0863-10  | Aircraft Nav. Light              |
| 30-0863-11  | Aircraft Nav. Light              |
| 30-0863-12  | Aircraft Nav. Light              |
| 30-0863-2   | Aircraft Nav. Light              |
| 30-0863-3   | Aircraft Nav. Light              |
| 30-0863-4   | Aircraft Nav. Light              |
| 30-0863-5   | Aircraft Nav. Light              |
| 30-0863-6   | Aircraft Nav. Light              |
| 30-0863-7   | Aircraft Nav. Light              |
| 30-0863-8   | Aircraft Nav. Light              |
| 30-0863-9   | Aircraft Nav. Light              |
| AR 850      | Altitude Reporter                |
| 30-0876-1   | Anti Collision Flashtube, Strobe |
| 30-0876-10  | Anti Collision Flashtube, Strobe |
| 30-0876-11  | Anti Collision Flashtube, Strobe |
| 30-0876-12  | Anti Collision Flashtube, Strobe |
| 30-0876-13  | Anti Collision Flashtube, Strobe |
| 30-0876-14  | Anti Collision Flashtube, Strobe |
| 30-0876-15  | Anti Collision Flashtube, Strobe |
| 30-0876-16  | Anti Collision Flashtube, Strobe |
| 30-0876-17  | Anti Collision Flashtube, Strobe |
| 30-0876-18  | Anti Collision Flashtube, Strobe |
| 30-0876-19  | Anti Collision Flashtube, Strobe |
| 30-0876-2   | Anti Collision Flashtube, Strobe |

## Accessories

### Accessories continued

| PART NUMBER   | DESCRIPTION                      |
|---------------|----------------------------------|
| 30-0876-20    | Anti Collision Flashtube, Strobe |
| 30-0876-21    | Anti Collision Flashtube, Strobe |
| 30-0876-22    | Anti Collision Flashtube, Strobe |
| 30-0876-23    | Anti Collision Flashtube, Strobe |
| 30-0876-24    | Anti Collision Flashtube, Strobe |
| 30-0876-25    | Anti Collision Flashtube, Strobe |
| 30-0876-3     | Anti Collision Flashtube, Strobe |
| 30-0876-4     | Anti Collision Flashtube, Strobe |
| 30-0876-5     | Anti Collision Flashtube, Strobe |
| 30-0876-6     | Anti Collision Flashtube, Strobe |
| 30-0876-7     | Anti Collision Flashtube, Strobe |
| 30-0876-7     | Anti Collision Flashtube, Strobe |
| 30-0876-8     | Anti Collision Flashtube, Strobe |
| 30-0876-9     | Anti Collision Flashtube, Strobe |
| 10-60772-4    | Aural Warning Device             |
| 8190026       | Autofeather Pressure switch      |
| DHCSC70020-5  | Pressure Switch                  |
| DHCSC70020-11 | Autofeather Pressure switch      |
| DHCSC70020-13 | Autofeather Pressure switch      |
| 30081-001     | Auxiliary DC Starter Generator   |
| 30081-010     | Auxiliary DC Starter Generator   |
| M5861AD-6B    | Axial Fan                        |
| M6921-W1B     | Axial Fan                        |
| M6921W-1B     | Axial Fan and Motor              |
| C6E1080-3     | Beta Prox. Sensor Assembly       |
| 3022566       | Bleed Air Valve                  |
| 3029174       | Bleed Air Valve                  |
| 3075033-01    | Bleed Air Valve                  |
| 3011765       | Bleed Valve                      |
| 3022095       | Bleed Valve                      |
| 3024060       | Bleed Valve                      |
| 3075033-01    | Bleed Valve                      |
| 3100829-01    | Bleed Valve                      |
| 3100829-03    | Bleed Valve                      |

## Accessories

### Accessories continued

| PART NUMBER      | DESCRIPTION           |
|------------------|-----------------------|
| 3117032-01       | Bleed Valve           |
| 3123122-01       | Bleed Valve           |
| 3123123-01       | Bleed Valve           |
| 320295-1         | Bleed Valve           |
| 320295-1E        | Bleed Valve           |
| 320295-1F        | Bleed Valve           |
| 320295-1H        | Bleed Valve           |
| 160-011          | Booster Pump          |
| 160-065          | Booster Pump          |
| RR12830A         | Booster Pump          |
| C6NF1106-25      | Box Assy Elect. C/LTS |
| C6NF1106-9       | Box Assy Elect. C/LTS |
| C6L1021-1 Series | Bracket               |
| 030-17000        | Brake Assembly        |
| 30-170           | Brake Assembly        |
| 9550377-2        | Brake Assembly        |
| 9550377-4        | Brake Assembly        |
| 9550377-4R       | Brake Assembly        |
| C6HF1037-1       | Brake Valve LH        |
| C6HF1036-1       | Brake Valve RH        |
| 2650157          | Check Valve           |
| C6NF1117 Series  | Beta Back Up Box      |
| C6NF1144-3       | Control Pump Changer  |
| C6PF1166 Series  | Switch                |
| 51539-014A       | DC Control Unit       |
| 200SGL111Q       | DC Starter Generator  |
| 200SGL111Q-2     | DC Starter Generator  |
| 200SGL111Q-3     | DC Starter Generator  |
| 200SGL112Q       | DC Starter Generator  |
| 200SGL114Q       | DC Starter Generator  |
| 200SGL115Q       | DC Starter Generator  |
| 200SGL115Q-2     | DC Starter Generator  |
| 200SGL117Q       | DC Starter Generator  |
| 200SGL118Q       | DC Starter Generator  |

## Accessories

### Accessories continued

| PART NUMBER  | DESCRIPTION          |
|--------------|----------------------|
| 200SGL119Q   | DC Starter Generator |
| 200SGL119Q-2 | DC Starter Generator |
| 200SGL120Q   | DC Starter Generator |
| 200SGL121Q   | DC Starter Generator |
| 200SGL124Q   | DC Starter Generator |
| 200SGL129Q   | DC Starter Generator |
| 200SGL129Q-1 | DC Starter Generator |
| 200SGL129Q-3 | DC Starter Generator |
| 200SGL129Q-4 | DC Starter Generator |
| 200SGL129Q-5 | DC Starter Generator |
| 200SGL129Q-8 | DC Starter Generator |
| 200SGL130Q   | DC Starter Generator |
| 200SGL131Q   | DC Starter Generator |
| 200SGL131Q-2 | DC Starter Generator |
| 200SGL131Q-5 | DC Starter Generator |
| 200SGL132Q   | DC Starter Generator |
| 200SGL132Q-2 | DC Starter Generator |
| 200SGL132Q-3 | DC Starter Generator |
| 200SGL132Q-4 | DC Starter Generator |
| 200SGL132Q-5 | DC Starter Generator |
| 200SGL142Q   | DC Starter Generator |
| 200SGL144Q   | DC Starter Generator |
| 200SGL145Q   | DC Starter Generator |
| 200SGL147Q   | DC Starter Generator |
| 200SGL147Q-2 | DC Starter Generator |
| 200SGL147Q-3 | DC Starter Generator |
| 200SGL151Q   | DC Starter Generator |
| 200SGL153Q   | DC Starter Generator |
| 23046-001    | DC Starter Generator |
| 23046-007    | DC Starter Generator |
| 23046-007M   | DC Starter Generator |
| 23046-009    | DC Starter Generator |
| 23046-017    | DC Starter Generator |
| 23046-019    | DC Starter Generator |

## Accessories

### Accessories continued

| PART NUMBER  | DESCRIPTION                          |
|--------------|--------------------------------------|
| 23046-020    | DC Starter Generator                 |
| 23046-028    | DC Starter Generator                 |
| 23048-001    | DC Starter Generator                 |
| 23048-004    | DC Starter Generator                 |
| 23048-004M   | DC Starter Generator                 |
| 23048-004T   | DC Starter Generator                 |
| 23048-004TM  | DC Starter Generator                 |
| 23048-006    | DC Starter Generator                 |
| 23048-008    | DC Starter Generator                 |
| 23048-009    | DC Starter Generator                 |
| 23048-016    | DC Starter Generator                 |
| 23048-017    | DC Starter Generator                 |
| 23048-018    | DC Starter Generator                 |
| 23048-020    | DC Starter Generator                 |
| 23048-021    | DC Starter Generator                 |
| 23048-022    | DC Starter Generator                 |
| 23048-023    | DC Starter Generator                 |
| 23048-027    | DC Starter Generator                 |
| 23048-028    | DC Starter Generator                 |
| 23048-046    | DC Starter Generator                 |
| 23078 Series | DC Starter Generator                 |
| 23080-013    | DC Starter Generator                 |
| 23080-013A   | DC Starter Generator                 |
| 23080-014    | DC Starter Generator                 |
| 23080-014A   | DC Starter Generator                 |
| 23080-13B    | DC Starter Generator                 |
| C6NF1297-1   | Dimming Control Box                  |
| C6NF1297-5   | Dimming Control Box                  |
| C6NF1297-9   | Dimming Control Box                  |
| 14-97862-02  | Electric Windshield Wiper Motor      |
| 398648-1-1   | Electric Temp Control Valve 2 1/2 in |
| 398648-1-2   | Electric Temp Control Valve 2 1/2 in |
| 398648-2-1   | Electric Temp Control Valve 2 1/2 in |
| 10-0055-1    | Emergency Exit Light                 |

## Accessories

### Accessories continued

| PART NUMBER    | DESCRIPTION              |
|----------------|--------------------------|
| 10-0055-11     | Emergency Exit Light     |
| 10-0055-13     | Emergency Exit Light     |
| 10-0055-15     | Emergency Exit Light     |
| 10-0055-17     | Emergency Exit Light     |
| 10-0055-19     | Emergency Exit Light     |
| 10-0055-21     | Emergency Exit Light     |
| 10-0055-25     | Emergency Exit Light     |
| 10-0055-3      | Emergency Exit Light     |
| 10-0055-5      | Emergency Exit Light     |
| 10-0055-7      | Emergency Exit Light     |
| 10-0055-9      | Emergency Exit Light     |
| 501-1712-01    | Emergency Power Supply   |
| 501-1712-02    | Emergency Power Supply   |
| 501-1712-03    | Emergency Power Supply   |
| 501-1712-04    | Emergency Power Supply   |
| 501-1719-01    | Emergency Power Supply   |
| 501-1719-02    | Emergency Power Supply   |
| C6SC1107-1     | Exhaust Stack LH         |
| C6SC1107-5     | Exhaust Stack LH         |
| C6SC1107-3     | Exhaust Stack RH         |
| C6SC1107-7     | Exhaust Stack RH         |
| 60-3844 Series | Exit Light Power Supply  |
| 810207 Series  | Fan Inlet Diffuser       |
| 3029267        | Filter                   |
| 17343-62-300   | Fire Detector            |
| 17343-62-450   | Fire Detector            |
| C6Cf1080-1     | Flap Elevator Ball Screw |
| C6CF1080-3     | Flap Elevator Ball Screw |
| SKA104-1       | Flap Sector Valve        |
| SKA104-3       | Flap Sector Valve        |
| SKA104-3A      | Flap Sector Valve        |
| 72266-3        | Fuel Pump                |
| 72368-1        | Fuel Pump                |
| 71383 Series   | Fuel Booster Pump        |

## Accessories

### Accessories continued

| PART NUMBER             | DESCRIPTION                 |
|-------------------------|-----------------------------|
| 52-2145-002             | Fuel Filter                 |
| 52-2889-002             | Fuel Filter                 |
| 9133-25-B1              | Fuel Flow Transmitter       |
| 9133-54-B1              | Fuel Flow Transmitter       |
| 391087-03081            | Fuel Probe                  |
| 391087-03082            | Fuel Probe                  |
| 391087-03083            | Fuel Probe                  |
| 391087-03084            | Fuel Probe                  |
| 391087-03085            | Fuel Probe                  |
| 391088-002              | Fuel Probe                  |
| 391088-003              | Fuel Probe                  |
| 391088-004              | Fuel Probe                  |
| 391088-005              | Fuel Probe                  |
| 391088-006              | Fuel Probe                  |
| 85861                   | Fuel Pump                   |
| 1D2-20                  | Fuel Pump                   |
| 72390-2                 | Fuel Pump                   |
| 15328                   | Fuel Shutoff Solenoid Valve |
| 15410                   | Fuel Shutoff Solenoid Valve |
| C6CF1174-1              | Gearing Mechanism Assembly  |
| C6CF1174-3              | Gearing Mechanism Assembly  |
| 51539-012 Series        | Generator Control Unit      |
| 51539-014A              | Generator Control Unit      |
| 51549-001A              | Generator Control Unit      |
| EVAC2322C2              | Ground Cooling Fan          |
| 914-8D27                | Hand Pump                   |
| 915-8D27                | Hand Pump                   |
| 916-8D27                | Hand Pump                   |
| AN6201-1                | Hand Pump                   |
| AN6248-2                | Hand Pump                   |
| 100-689-4               | Hydraulic Pump & Motor      |
| 100-689-3               | Hydraulic Pump and Motor    |
| 2803P-455L (C6SC1063-3) | Ice Door Indicator          |
| C6CT1010-1              | Jack Screw Drive            |

## Accessories

### Accessories continued

| PART NUMBER    | DESCRIPTION                     |
|----------------|---------------------------------|
| C6CT1010-3     | Jack Screw Drive                |
| G5400 Series   | Landing Light                   |
| 167-5          | Lift Detector                   |
| L10-20         | Linear Actuator                 |
| SYLC-51836     | Linear Actuator                 |
| SYLC-51836-1   | Linear Actuator                 |
| SYLC-51836-10  | Linear Actuator                 |
| MGE23 Series   | Motor Generator Assembly        |
| 30-1588 Series | Navigational Light              |
| 710300-25      | Nose Landing Gear               |
| 71-100-35      | Nose Landing Gear               |
| 71-300-27      | Nose Landing Gear               |
| 71-300-29      | Nose Landing Gear               |
| 71-300-35      | Nose Landing Gear               |
| 71-300-37      | Nose Landing Gear               |
| 71-100-31      | Nose Landing Gear with Actuator |
| 71-100-33      | Nose Landing Gear with Actuator |
| 3567749-1501   | Oil Pressure Transmitter        |
| 3567749-4001   | Oil Pressure Transmitter        |
| 3567749-4003   | Oil Pressure Transmitter        |
| 3567749-6001   | Oil Pressure Transmitter        |
| 3567749-6505   | Oil Pressure Transmitter        |
| 3567749-7103   | Oil Pressure Transmitter        |
| 3567749-9401   | Oil Pressure Transmitter        |
| 3567749-9402   | Oil Pressure Transmitter        |
| 3567749-9502   | Oil Pressure Transmitter        |
| 3567749-9601   | Oil Pressure Transmitter        |
| 7749-41A5-1    | Oil Pressure Transmitter        |
| 10552 Series   | Oil to Heat Exchange            |
| MS28034-1      | Oil Temperature Sensor          |
| 60-1755-1      | Power Supply                    |
| 60-2799-1      | Power Supply                    |
| 60-2799-1      | Power Supply                    |
| 60-2799-11     | Power Supply                    |

## Accessories

### Accessories continued

| PART NUMBER      | DESCRIPTION             |
|------------------|-------------------------|
| 60-2799-13       | Power Supply            |
| 60-2799-13       | Power Supply            |
| 60-2799-3        | Power Supply            |
| 60-2799-3        | Power Supply            |
| 60-2799-5        | Power Supply            |
| 60-2799-5        | Power Supply            |
| 60-2799-7        | Power Supply            |
| 60-2799-7        | Power Supply            |
| 60-2799-9        | Power Supply            |
| 60-2799-9        | Power Supply            |
| 60-3844 Series   | Exit Light Power Supply |
| 8TJ88GAC Series  | Power Supply            |
| 8TJ88GAD3 Series | Power Supply            |
| 8190026          | Pressure Switch         |
| 1115P48-15       | Pressure Switch         |
| 1115P48-17       | Pressure Switch         |
| 1115P48-21       | Pressure Switch         |
| 1115P48-23       | Pressure Switch         |
| 1115P48-7        | Pressure Switch         |
| 1G177-15         | Pressure Switch         |
| 1G177-7          | Pressure Switch         |
| 1G177-9          | Pressure Switch         |
| 1G198            | Pressure Switch         |
| 1G198-2          | Pressure Switch         |
| 1G198-3          | Pressure Switch         |
| 6607P9-53        | Pressure Switch         |
| 6607P9-6         | Pressure Switch         |
| 6607P9-6A        | Pressure Switch         |
| 98087-1115P48-15 | Pressure Switch         |
| DHCSC70019-15    | Pressure Switch         |
| DHCSC70019-17    | Pressure Switch         |
| DHCSC70019-21    | Pressure Switch         |
| DHCSC70019-23    | Pressure Switch         |
| DHCSC70019-7     | Pressure Switch         |

## Accessories

### Accessories continued

| PART NUMBER  | DESCRIPTION            |
|--------------|------------------------|
| DHCSC70020-5 | Pressure Switch        |
| 318-02020    | Pressure Transmitter   |
| 418-01064    | Pressure Transmitter   |
| 1D2-17       | Pump                   |
| 12XRP12A1    | Relay                  |
| MS24171-D1   | Relay                  |
| MS24172-D1   | Relay                  |
| XRP12A       | Relay                  |
| MS25035-1    | Relay                  |
| A-700 AAP    | Relay, Rev, Current    |
| A-700 AP     | Relay, Rev, Current    |
| A-700 APM    | Relay, Rev, Current    |
| A-701D       | Relay, Rev, Current    |
| 68400A36-24  | Rotating Warning Light |
| 68400A43-24  | Rotating Warning Light |
| C8400A31-24  | Rotating Warning Light |
| G8400A10-24  | Rotating Warning Light |
| G8400A12     | Rotating Warning Light |
| G8400A12-12  | Rotating Warning Light |
| G8400A13-24  | Rotating Warning Light |
| G8400A14-24  | Rotating Warning Light |
| G8400A15-24  | Rotating Warning Light |
| G8400A21-24  | Rotating Warning Light |
| G8400A22-24  | Rotating Warning Light |
| G8400A23-24  | Rotating Warning Light |
| G8400A24     | Rotating Warning Light |
| G8400A24-24  | Rotating Warning Light |
| G8400A3-12   | Rotating Warning Light |
| G8400A36-24  | Rotating Warning Light |
| G8400A37-24  | Rotating Warning Light |
| G8400A41-24  | Rotating Warning Light |
| G8400A45-12  | Rotating Warning Light |
| G8400A47-24  | Rotating Warning Light |
| G8400A49-24  | Rotating Warning Light |

## Accessories

### Accessories continued

| PART NUMBER   | DESCRIPTION            |
|---------------|------------------------|
| G8400A8-12    | Rotating Warning Light |
| G8400A8-24    | Rotating Warning Light |
| G8400A9-24    | Rotating Warning Light |
| G8400All-24   | Rotating Warning Light |
| GS400A39-24   | Rotating Warning Light |
| G-9950 Series | Navigational Light     |
| 71-300-1      | Shock Strut Assembly   |
| 71-300-11     | Shock Strut Assembly   |
| 71-300-15     | Shock Strut Assembly   |
| 71-300-17     | Shock Strut Assembly   |
| 71-300-19     | Shock Strut Assembly   |
| 71-300-21     | Shock Strut Assembly   |
| 71-300-23     | Shock Strut Assembly   |
| 71-300-25     | Shock Strut Assembly   |
| 71-300-27     | Shock Strut Assembly   |
| 71-300-29     | Shock Strut Assembly   |
| 71-300-3      | Shock Strut Assembly   |
| 71-300-31     | Shock Strut Assembly   |
| 71-300-33     | Shock Strut Assembly   |
| 71-300-5      | Shock Strut Assembly   |
| 71-300-7      | Shock Strut Assembly   |
| 71-300-9      | Shock Strut Assembly   |
| 26440051      | Shutoff Valve          |
| U9500         | Solenoid Fuel Bleed    |
| 15-0069-1     | Spot Light             |
| 15-0069-11    | Spot Light             |
| 15-0069-13    | Spot Light             |
| 15-0069-15    | Spot Light             |
| 15-0069-17    | Spot Light             |
| 15-0069-19    | Spot Light             |
| 15-0069-21    | Spot Light             |
| 15-0069-25    | Spot Light             |
| 15-0069-3     | Spot Light             |
| 15-0069-5     | Spot Light             |

## Accessories

### Accessories continued

| PART NUMBER   | DESCRIPTION                |
|---------------|----------------------------|
| 15-0069-7     | Spot Light                 |
| 15-0069-9     | Spot Light                 |
| 430-M1        | Stall Warning Device       |
| 28VS200Y-4DH  | Static Converter           |
| PC-15         | Static Inverter            |
| PC-15B        | Static Inverter            |
| PC-15BC       | Static Inverter            |
| PC250         | Static Inverter            |
| PC250-1A      | Static Inverter            |
| PC250-1B      | Static Inverter            |
| PC250-1C      | Static Inverter            |
| PC250-2A      | Static Inverter            |
| PC-17 Series  | Static Inverter            |
| PC-251        | Static Inverter            |
| PC-251-15A    | Static Inverter            |
| PC-251-15B    | Static Inverter            |
| PC-251-15C    | Static Inverter            |
| PC-251-1C     | Static Inverter            |
| PC-251-1D     | Static Inverter            |
| PC-251-3A     | Static Inverter            |
| PC-251-3B     | Static Inverter            |
| PC-251-5A     | Static Inverter            |
| PC-251-5B     | Static Inverter            |
| PC-251-5C     | Static Inverter            |
| PC-350 Series | Static Inverter            |
| 5590F1-1      | Static Power Inverter      |
| 71-190-11B    | Steering Actuator Assembly |
| 71-190-13     | Steering Actuator Assembly |
| 71-190-15     | Steering Actuator Assembly |
| 71-190-7      | Steering Actuator Assembly |
| 71-200-11B    | Steering Actuator Assembly |
| 71-200-13     | Steering Actuator Assembly |
| 71-200-15     | Steering Actuator Assembly |
| 71-200-7      | Steering Actuator Assembly |

## Accessories

### Accessories continued

| PART NUMBER    | DESCRIPTION                    |
|----------------|--------------------------------|
| 70029 Series   | Strobe Light                   |
| 70-0075-1      | Strobe Light Flasher Supply    |
| 26900-X Series | Submerged Fuel Boost Pump      |
| 28550-X Series | Submerged Fuel Boost Pump      |
| 2CM9AAA6       | Tachometer Generator           |
| 2CM9AAC6       | Tachometer Generator           |
| 2CM9AAH4       | Tachometer Generator           |
| 2CM9AAV6       | Tachometer Generator           |
| 2CM9AAZ6       | Tachometer Generator           |
| 2CM9ABE6       | Tachometer Generator           |
| 2CM9ABH7       | Tachometer Generator           |
| 2CM9ABK7       | Tachometer Generator           |
| 2CM9ABY7       | Tachometer Generator           |
| 2CM9ABZ7       | Tachometer Generator           |
| 2CM9ACE7       | Tachometer Generator           |
| 2CM9ACF8       | Tachometer Generator           |
| 2CM9ACH7       | Tachometer Generator           |
| 2CM9ADB9       | Tachometer Generator           |
| 2CM9ADE8       | Tachometer Generator           |
| 2CM9ADT6       | Tachometer Generator           |
| 32005-007      | Tachometer Generator           |
| 32005-008      | Tachometer Generator           |
| 32005-023      | Tachometer Generator           |
| 32005-025      | Tachometer Generator           |
| 32005-026      | Tachometer Generator           |
| 32005-030      | Tachometer Generator           |
| 32005-034      | Tachometer Generator           |
| 32005-037      | Tachometer Generator           |
| 30-1840-1      | Tail light                     |
| 30-1840-2      | Tail light                     |
| 30-1840-3      | Tail light                     |
| 30-0909-1      | Tail Position Flashtube Lights |
| 30-0909-101    | Tail Position Flashtube Lights |
| 30-0909-103    | Tail Position Flashtube Lights |

## Accessories

### Accessories continued

| PART NUMBER      | DESCRIPTION                       |
|------------------|-----------------------------------|
| 30-0909-107      | Tail Position Flashtube Lights    |
| 30-0909-201      | Tail Position Flashtube Lights    |
| 30-0909-203      | Tail Position Flashtube Lights    |
| 30-0909-207      | Tail Position Flashtube Lights    |
| G-9950-1         | Tandem Oscillating A/C Nav. Light |
| G-9950-11        | Tandem Oscillating A/C Nav. Light |
| G-9950-13        | Tandem Oscillating A/C Nav. Light |
| G-9950-15        | Tandem Oscillating A/C Nav. Light |
| G-9950-2         | Tandem Oscillating A/C Nav. Light |
| G-9950-5         | Tandem Oscillating A/C Nav. Light |
| G-9950-7         | Tandem Oscillating A/C Nav. Light |
| G-9950-9         | Tandem Oscillating A/C Nav. Light |
| BYLB51044        | Temperature Control Valve         |
| BYLB51045        | Temperature Control Valve         |
| 217-09261        | Torque Pressure Indicator         |
| C6SC1026-1       | Torque Pressure Indicator         |
| ST-502H          | Torque Pressure Transmitter       |
| 418-04024        | Torque Pressure Trasmmitter       |
| DH-1030-24-65-CS | Transverter                       |
| AV16B1864B       | Valve                             |
| BYLB9304 Series  | Valve Actuator                    |
| 12040            | Valve and Gauge                   |
| 12149            | Valve and Gauge                   |
| 12199            | Valve and Gauge                   |
| 12056-1          | Valve and Gauge                   |
| 12057-1          | Valve and Gauge                   |
| 12057-3          | Valve and Gauge                   |
| AV16B1762B       | Valve, Shutoff                    |
| VR-1010-24-1A    | Voltage Regulator                 |
| VR-1010-24-2A    | Voltage Regulator                 |
| 90-0180-3        | Windshield Wiper System           |
| 90-0180-5        | Windshield Wiper System           |
| 90-0180-7        | Windshield Wiper System           |
| XW21160-2        | Windshield Wiper System           |

## Accessories

### Accessories continued

| PART NUMBER    | DESCRIPTION                |
|----------------|----------------------------|
| C6HF1020-1     | Wing Flap Actuator         |
| C6HF1020-3     | Wing Flap Actuator         |
| C6HF1020-5     | Wing Flap Actuator         |
| 2312M41-8      | Wiper Motor                |
| 90-0182 Series | Wiper Motor                |
| 14-91355-01    | Windshield Wiper Converter |
| 14-91355-02    | Windshield Wiper Converter |
| 14-91355-03    | Windshield Wiper Converter |
| 14-91355-04    | Windshield Wiper Converter |
| 14-91355-07    | Windshield Wiper Converter |
| 14-91355-12    | Windshield Wiper Converter |
| 14-91355-13    | Windshield Wiper Converter |
| 14-91355-15    | Windshield Wiper Converter |
| 14-91355-16    | Windshield Wiper Converter |
| 14-91355-18    | Windshield Wiper Converter |
| 14-91355-19    | Windshield Wiper Converter |
| 14-91355-21    | Windshield Wiper Converter |
| 14-91355-22    | Windshield Wiper Converter |
| 14-91355-23    | Windshield Wiper Converter |
| 14-91355-24    | Windshield Wiper Converter |
| 14-91355-26    | Windshield Wiper Converter |
| 14-91355-27    | Windshield Wiper Converter |
| 14-91355-28    | Windshield Wiper Converter |
| 14-91355-29    | Windshield Wiper Converter |
| 14-91355-30    | Windshield Wiper Converter |
| 14-91355-32    | Windshield Wiper Converter |
| 14-91355-33    | Windshield Wiper Converter |
| 14-91355-34    | Windshield Wiper Converter |
| 14-91355-35    | Windshield Wiper Converter |
| 14-91355-36    | Windshield Wiper Converter |
| 14-91355-37    | Windshield Wiper Converter |
| 14-91355-39    | Windshield Wiper Converter |
| 14-91355-42    | Windshield Wiper Converter |
| 14-91355-44    | Windshield Wiper Converter |

## Accessories

### Accessories continued

| PART NUMBER | DESCRIPTION                |
|-------------|----------------------------|
| 14-91355-45 | Windshield Wiper Converter |
| 14-91355-46 | Windshield Wiper Converter |
| 14-91355-47 | Windshield Wiper Converter |
| 14-91355-49 | Windshield Wiper Converter |
| 14-91355-50 | Windshield Wiper Converter |
| 14-91355-51 | Windshield Wiper Converter |
| 14-91355-52 | Windshield Wiper Converter |
| 14-91355-53 | Windshield Wiper Converter |
| 14-91355-54 | Windshield Wiper Converter |
| 14-91355-55 | Windshield Wiper Converter |
| 14-91355-56 | Windshield Wiper Converter |
| 14-91355-57 | Windshield Wiper Converter |
| 14-91355-58 | Windshield Wiper Converter |
| 14-91355-59 | Windshield Wiper Converter |
| 14-91355-60 | Windshield Wiper Converter |
| 14-91355-61 | Windshield Wiper Converter |
| 14-91355-62 | Windshield Wiper Converter |
| 14-91355-63 | Windshield Wiper Converter |
| 14-91355-64 | Windshield Wiper Converter |
| 14-91355-65 | Windshield Wiper Converter |
| 14-91355-66 | Windshield Wiper Converter |
| 14-91355-67 | Windshield Wiper Converter |
| 14-91355-68 | Windshield Wiper Converter |
| 14-91355-69 | Windshield Wiper Converter |
| 14-91355-70 | Windshield Wiper Converter |
| 14-91355-72 | Windshield Wiper Converter |
| 14-91355-73 | Windshield Wiper Converter |
| 14-91355-74 | Windshield Wiper Converter |
| 14-91355-75 | Windshield Wiper Converter |
| 14-91355-76 | Windshield Wiper Converter |
| 14-91355-83 | Windshield Wiper Converter |
| 14-91355-85 | Windshield Wiper Converter |
| 14-91355-86 | Windshield Wiper Converter |
| 14-91355-87 | Windshield Wiper Converter |

Accessories

Accessories continued

| PART NUMBER    | DESCRIPTION                |
|----------------|----------------------------|
| 14-91355-88    | Windshield Wiper Converter |
| 14-91355-89    | Windshield Wiper Converter |
| 14-91455-01    | Windshield Wiper Converter |
| 14-91455-02    | Windshield Wiper Converter |
| 14-91455-05    | Windshield Wiper Converter |
| 14-91455-09    | Windshield Wiper Converter |
| 14-91455-10    | Windshield Wiper Converter |
| 14-91455-11    | Windshield Wiper Converter |
| 14-91455-12    | Windshield Wiper Converter |
| 14-91455-16    | Windshield Wiper Converter |
| 14-91455-17    | Windshield Wiper Converter |
| XW21121-227-90 | Wiper Converter            |

# Airframe

DHC-6 - 100,200,300,400

15 entries

Airframe

| PART NUMBER | DESCRIPTION                |
|-------------|----------------------------|
| C6FF1158-1  | Door, Pilot L/H            |
| C6FF1158-13 | Pilot Door L/H             |
| C6FF1158-14 | Co-Pilot Door R/H          |
| C6FS1828-1  | Aft Support                |
| C6FS3626-5  | Airstair Door              |
| C6WM1078-3  | Door-Wing Leading Edge L/H |
| C6WM1078-4  | Door-Wing Leading Edge R/H |
| C6FS2741-27 | Spring Tail Bumper         |
| C6L1020-3   | Duct Assembly              |
| C6TR1013-1  | Fairing, Rudder            |
| C6FF2130-9  | DBL Utility Seat           |
| C6CWM1049-8 | Lever Assembly RH          |
| 9536259     | Disc Drive Ring            |
| C6TE1054-3  | Tab Assembly RH            |
| C6CT1013-1  | Rod Assembly               |

# Instruments

524 entries

## Instruments

| PART NUMBER    | DESCRIPTION                     |
|----------------|---------------------------------|
| 060-0015 -00   | Directional Gyro                |
| 10170N01R00    | % RPM Indicator                 |
| 10170N02R00    | % RPM Indicator                 |
| 10177N01R00    | % RPM Indicator                 |
| 10177N02R00    | % RPM Indicator                 |
| C6CS1038-1     | Aileron Trim Indicator          |
| 4350-150-80-10 | Aileron Trim Position Indicator |
| 1402-C1        | Air Speed Indicator             |
| 1402-C2        | Air Speed Indicator             |
| 1402-C3        | Air Speed Indicator             |
| 1426-A1        | Air Speed Indicator             |
| 1426-A10       | Air Speed Indicator             |
| 1426-A12       | Air Speed Indicator             |
| 1426-A16       | Air Speed Indicator             |
| 1426-A17       | Air Speed Indicator             |
| 1426-A2        | Air Speed Indicator             |
| 1426-A6        | Air Speed Indicator             |
| 1426-A9        | Air Speed Indicator             |
| 1426-B1        | Air Speed Indicator             |
| 1426-B17       | Air Speed Indicator             |
| 1426-B6        | Air Speed Indicator             |
| 1426-1Z-A1     | Airspeed Indicator              |
| 21140-1134-2   | Airspeed Indicator              |
| 8047           | Altimeter                       |
| 8048           | Altimeter                       |
| 101720-01354   | Altimeter                       |
| 101720-01355   | Altimeter                       |
| 101720-11384   | Altimeter                       |
| 101720-11385   | Altimeter                       |
| 101720-11386   | Altimeter                       |
| 101730-01356   | Altimeter                       |
| 101730-01357   | Altimeter                       |

## Instruments

### Instruments continued

| PART NUMBER   | DESCRIPTION                     |
|---------------|---------------------------------|
| 101730-01387  | Altimeter                       |
| 101730-01388  | Altimeter                       |
| 101730-01419  | Altimeter                       |
| 101730-11389  | Altimeter                       |
| 101730-11390  | Altimeter                       |
| 24929-951     | Altimeter                       |
| 8047          | Altimeter                       |
| 8047/10       | Altimeter                       |
| 8047/10B      | Altimeter                       |
| 8047/10DH     | Altimeter                       |
| 8047/10NVG    | Altimeter                       |
| 8047/10NVG-5V | Altimeter                       |
| 8047/20       | Altimeter                       |
| 8047/20A      | Altimeter                       |
| 8047/20B      | Altimeter                       |
| 8047/20DH     | Altimeter                       |
| 8040          | Altimeter                       |
| 8048/1        | Altimeter                       |
| C14129BA      | Altimeter                       |
| C14130AA      | Altimeter                       |
| WL102AMS1     | Altimeter/Airspeed              |
| WL102AMS2     | Altimeter/Airspeed              |
| WL102AMS3     | Altimeter/Airspeed              |
| WL102AMS4     | Altimeter/Airspeed              |
| WL102AMS5     | Altimeter/Airspeed              |
| 8900 AMS 2000 | Altitude Management System 2000 |
| 4200-1X       | Attitude Indicator              |
| 510           | Attitude Gyro                   |
| 504-0017-901  | Attitude Gyro                   |
| 504-0017-907  | Attitude Gyro                   |
| 504-0017-909  | Attitude Gyro                   |
| 504-0017-910  | Attitude Gyro                   |
| 504-0017-913  | Attitude Gyro                   |
| 504-0017-916  | Attitude Gyro                   |

## Instruments

### Instruments continued

| PART NUMBER  | DESCRIPTION   |
|--------------|---------------|
| 504-0017-917 | Attitude Gyro |
| 504-0017-921 | Attitude Gyro |
| 504-0017-923 | Attitude Gyro |
| 504-0017-933 | Attitude Gyro |
| 504-0017-934 | Attitude Gyro |
| 504-0019-907 | Attitude Gyro |
| 504-0021-903 | Attitude Gyro |
| 504-0028-912 | Attitude Gyro |
| 504-0028-913 | Attitude Gyro |
| 504-0030-920 | Attitude Gyro |
| 504-0031-909 | Attitude Gyro |
| 504-0031-910 | Attitude Gyro |
| 504-0031-911 | Attitude Gyro |
| 504-0031-912 | Attitude Gyro |
| 504-0031-913 | Attitude Gyro |
| 504-0031-914 | Attitude Gyro |
| 504-0032-902 | Attitude Gyro |
| 504-0033-921 | Attitude Gyro |
| 504-0033-922 | Attitude Gyro |
| 504-0033-923 | Attitude Gyro |
| 504-0033-924 | Attitude Gyro |
| 504-0033-925 | Attitude Gyro |
| 504-0033-926 | Attitude Gyro |
| 504-0033-927 | Attitude Gyro |
| 504-0033-928 | Attitude Gyro |
| 504-0033-929 | Attitude Gyro |
| 504-0033-930 | Attitude Gyro |
| 504-0033-930 | Attitude Gyro |
| 504-0033-931 | Attitude Gyro |
| 504-0033932  | Attitude Gyro |
| 504-0033-933 | Attitude Gyro |
| 504-0033-934 | Attitude Gyro |
| 504-0045-901 | Attitude Gyro |
| 504-0045-902 | Attitude Gyro |

## Instruments

### Instruments continued

| PART NUMBER   | DESCRIPTION                       |
|---------------|-----------------------------------|
| 504-0045-903  | Attitude Gyro                     |
| 504-0045-904  | Attitude Gyro                     |
| 504-0046-901  | Attitude Gyro                     |
| 504-0048-901  | Attitude Gyro                     |
| 504-0048-903  | Attitude Gyro                     |
| 504-0051-901  | Attitude Gyro                     |
| 504-0052-901  | Attitude Gyro                     |
| 504-0057-901  | Attitude Gyro                     |
| 504-0121-901  | Attitude Gyro                     |
| 500E          | Attitude Indicator                |
| 504-0002-902  | Attitude Indicator                |
| BTM501        | Battery Temperature Monitor       |
| DHCSC-70021-1 | DC Load                           |
| DHCSC-70021-3 | DC Load                           |
| 253198        | Dc Millivoltmeter                 |
| DHCSC70022-1  | DC Volts                          |
| 253199        | DC Volts                          |
| 811B-1        | Digital Clock                     |
| 522-3241-000  | Directional Gyro                  |
| 2587193       | Directional Gyro                  |
| 060-0015-001  | Directional Gyro                  |
| 060-0015-002  | Directional Gyro                  |
| 2587193-143   | Directional Gyro                  |
| 2587193-41    | Directional Gyro                  |
| 2587193-42    | Directional Gyro                  |
| 2587193-43    | Directional Gyro                  |
| 2587193-44    | Directional Gyro                  |
| 2587193-45    | Directional Gyro                  |
| 2587193-46    | Directional Gyro                  |
| 2587193-47    | Directional Gyro                  |
| KG-102A       | Directional Gyro                  |
| 200           | Directional Indicator             |
| 8SC0068       | Dual Hydraulic Quantity Indicator |
| SRDL-OC12F    | Dual Hydraulic Quantity Indicator |

## Instruments

### Instruments continued

| PART NUMBER     | DESCRIPTION                 |
|-----------------|-----------------------------|
| 4428-150-80-10  | Flap Position Indicator     |
| 4428-150-80-11  | Flap Position Indicator     |
| 3571810         | Fuel Flow Indicator         |
| 25510B25B8A3    | Fuel Flow Indicator         |
| 25514B25A3A3    | Fuel Flow Indicator         |
| 25514-B25A-3-A3 | Fuel Flow Indicator         |
| 25516C96A14A3   | Fuel Flow Indicator         |
| 3571810-003     | Fuel Flow Indicator         |
| 3571810-2001    | Fuel Flow Indicator         |
| 3571810-8001    | Fuel Flow Indicator         |
| C6SC1036-1      | Fuel Flow Indicator         |
| C6SC1036-1      | Fuel Flow Indicator         |
| 393000-01703    | Fuel Quantity Indicator     |
| 393000-01704    | Fuel Quantity Indicator     |
| 393004-060      | Fuel Quantity Indicator     |
| 393004-061      | Fuel Quantity Indicator     |
| 393004-131      | Fuel Quantity Indicator     |
| 393004-132      | Fuel Quantity Indicator     |
| 500 ED          | Horizon Reference Indicator |
| 500DC           | Horizon Reference Indicator |
| 500DCF          | Horizon Reference Indicator |
| 500E            | Horizon Reference Indicator |
| 500ECF          | Horizon Reference Indicator |
| 500EDC          | Horizon Reference Indicator |
| 066-3046-000    | Horizon Situation Indicator |
| 066-3046-001    | Horizon Situation Indicator |
| 066-3046-002    | Horizon Situation Indicator |
| 066-3046-003    | Horizon Situation Indicator |
| 066-3046-004    | Horizon Situation Indicator |
| 066-3046-005    | Horizon Situation Indicator |
| 066-3046-006    | Horizon Situation Indicator |
| 066-3046-007    | Horizon Situation Indicator |
| 066-3046-008    | Horizon Situation Indicator |
| 066-3046-009    | Horizon Situation Indicator |

## Instruments

### Instruments continued

| PART NUMBER   | DESCRIPTION                          |
|---------------|--------------------------------------|
| 066-3046-010  | Horizon Situation Indicator          |
| 066-3046-011  | Horizon Situation Indicator          |
| 066-3046-012  | Horizon Situation Indicator          |
| KI525A        | Horizon Situation Indicator          |
| DHCSC-70021-1 | Load meter                           |
| 253607        | Micoammeter                          |
| 727MVB01      | Millivoltmeter Temperature Indicator |
| 727MVB010     | Millivoltmeter Temperature Indicator |
| 727MVB011     | Millivoltmeter Temperature Indicator |
| 727MVB014     | Millivoltmeter Temperature Indicator |
| 727MVB015     | Millivoltmeter Temperature Indicator |
| 727MVB016     | Millivoltmeter Temperature Indicator |
| 727MVB017-580 | Millivoltmeter Temperature Indicator |
| 727MVB017-600 | Millivoltmeter Temperature Indicator |
| 727MVB017-640 | Millivoltmeter Temperature Indicator |
| 727MVB018-580 | Millivoltmeter Temperature Indicator |
| 727MVB018-610 | Millivoltmeter Temperature Indicator |
| 727MVB018-620 | Millivoltmeter Temperature Indicator |
| 727MVB018-640 | Millivoltmeter Temperature Indicator |
| 727MVB019     | Millivoltmeter Temperature Indicator |
| 727MVB02      | Millivoltmeter Temperature Indicator |
| 727MVB020-500 | Millivoltmeter Temperature Indicator |
| 727MVB020-560 | Millivoltmeter Temperature Indicator |
| 727MVB021-500 | Millivoltmeter Temperature Indicator |
| 727MVB022     | Millivoltmeter Temperature Indicator |
| 727MVB024     | Millivoltmeter Temperature Indicator |
| 727MVB025-640 | Millivoltmeter Temperature Indicator |
| 727MVB026     | Millivoltmeter Temperature Indicator |
| 727MVB028-580 | Millivoltmeter Temperature Indicator |
| 727MVB03      | Millivoltmeter Temperature Indicator |
| 727MVB034     | Millivoltmeter Temperature Indicator |
| 727MVB034-700 | Millivoltmeter Temperature Indicator |
| 727MVB03-580  | Millivoltmeter Temperature Indicator |
| 727MVB037     | Millivoltmeter Temperature Indicator |

## Instruments

### Instruments continued

| PART NUMBER  | DESCRIPTION                          |
|--------------|--------------------------------------|
| 727MVB38     | Millivoltmeter Temperature Indicator |
| 727MVB39-700 | Millivoltmeter Temperature Indicator |
| 727MVB4      | Millivoltmeter Temperature Indicator |
| 727MVB40-700 | Millivoltmeter Temperature Indicator |
| 727MVB42-690 | Millivoltmeter Temperature Indicator |
| 727MVB43-550 | Millivoltmeter Temperature Indicator |
| 727MVB44-700 | Millivoltmeter Temperature Indicator |
| 727MVB46-650 | Millivoltmeter Temperature Indicator |
| 727MVB47-580 | Millivoltmeter Temperature Indicator |
| 727MVB48     | Millivoltmeter Temperature Indicator |
| 727MVB5      | Millivoltmeter Temperature Indicator |
| 727MVB50     | Millivoltmeter Temperature Indicator |
| 727MVB51-700 | Millivoltmeter Temperature Indicator |
| 727MVB52-640 | Millivoltmeter Temperature Indicator |
| 727MVB53-750 | Millivoltmeter Temperature Indicator |
| 727MVB54-690 | Millivoltmeter Temperature Indicator |
| 727MVB56-730 | Millivoltmeter Temperature Indicator |
| 727MVB57-740 | Millivoltmeter Temperature Indicator |
| 727MVB59-720 | Millivoltmeter Temperature Indicator |
| 727MVB6      | Millivoltmeter Temperature Indicator |
| 727MVB60-720 | Millivoltmeter Temperature Indicator |
| 727MVB61-750 | Millivoltmeter Temperature Indicator |
| 727MVB62-700 | Millivoltmeter Temperature Indicator |
| 727MVB63     | Millivoltmeter Temperature Indicator |
| 727MVB64-660 | Millivoltmeter Temperature Indicator |
| 727MVB65-720 | Millivoltmeter Temperature Indicator |
| 727MVB66-660 | Millivoltmeter Temperature Indicator |
| 727MVB68-640 | Millivoltmeter Temperature Indicator |
| 727MVB69-750 | Millivoltmeter Temperature Indicator |
| 727MVB7      | Millivoltmeter Temperature Indicator |
| 727MVB8      | Millivoltmeter Temperature Indicator |
| 762MVB44-791 | Millivoltmeter Temperature Indicator |
| 762MVB10-700 | Millivoltmeter Temperature Indicator |
| 762MVB11     | Millivoltmeter Temperature Indicator |

## Instruments

### Instruments continued

| PART NUMBER    | DESCRIPTION                          |
|----------------|--------------------------------------|
| 762MVBUI2      | Millivoltmeter Temperature Indicator |
| 762MVBUI5-725  | Millivoltmeter Temperature Indicator |
| 762MVBUI6-580  | Millivoltmeter Temperature Indicator |
| 762MVBUI1-740  | Millivoltmeter Temperature Indicator |
| 762MVBUI8-740  | Millivoltmeter Temperature Indicator |
| 762MVBUI8-750  | Millivoltmeter Temperature Indicator |
| 762MVBUI9-700  | Millivoltmeter Temperature Indicator |
| 762MVBUI20-860 | Millivoltmeter Temperature Indicator |
| 762MVBUI21-860 | Millivoltmeter Temperature Indicator |
| 762MVBUI22-680 | Millivoltmeter Temperature Indicator |
| 762MVBUI23-860 | Millivoltmeter Temperature Indicator |
| 762MVBUI24-790 | Millivoltmeter Temperature Indicator |
| 762MVBUI25-720 | Millivoltmeter Temperature Indicator |
| 762MVBUI2-580  | Millivoltmeter Temperature Indicator |
| 762MVBUI26-700 | Millivoltmeter Temperature Indicator |
| 762MVBUI27-860 | Millivoltmeter Temperature Indicator |
| 762MVBUI28-800 | Millivoltmeter Temperature Indicator |
| 762MVBUI30-770 | Millivoltmeter Temperature Indicator |
| 762MVBUI33-700 | Millivoltmeter Temperature Indicator |
| 762MVBUI34-700 | Millivoltmeter Temperature Indicator |
| 762MVBUI3-520  | Millivoltmeter Temperature Indicator |
| 762MVBUI3-560  | Millivoltmeter Temperature Indicator |
| 762MVBUI36-860 | Millivoltmeter Temperature Indicator |
| 762MVBUI38-790 | Millivoltmeter Temperature Indicator |
| 762MVBUI40-860 | Millivoltmeter Temperature Indicator |
| 762MVBUI41-805 | Millivoltmeter Temperature Indicator |
| 762MVBUI42-900 | Millivoltmeter Temperature Indicator |
| 762MVBUI43-900 | Millivoltmeter Temperature Indicator |
| 762MVBUI5-590  | Millivoltmeter Temperature Indicator |
| 762MVBUI5-600  | Millivoltmeter Temperature Indicator |
| 762MVBUI6-580  | Millivoltmeter Temperature Indicator |
| 762MVBUI7      | Millivoltmeter Temperature Indicator |
| 762MVBUI8-550  | Millivoltmeter Temperature Indicator |
| 762MVBUI9-550  | Millivoltmeter Temperature Indicator |

## Instruments

### Instruments continued

| PART NUMBER        | DESCRIPTION                          |
|--------------------|--------------------------------------|
| LU762MVB31-810     | Millivoltmeter Temperature Indicator |
| PW/727MV/BU/44/700 | Millivoltmeter Temperature Indicator |
| 8SC0056            | NH% RPM Indicator                    |
| 8SC0323            | NH% RPM Indicator                    |
| SEL-OC29DA         | NH% RPM Indicator                    |
| SEL-OC29DG         | NH% RPM Indicator                    |
| SEL-OC29DK         | NH% RPM Indicator                    |
| 120-IN-0044        | NH% RPM Indicator                    |
| 8SC0327            | NL% RPM Indicator                    |
| SEL-OC29DJ         | NL% RPM Indicator                    |
| 25510A122A8A2      | Oil Pressure Indicator               |
| 3571810-0002       | Oil Pressure Indicator               |
| 3571810-0007       | Oil Pressure Indicator               |
| C6SC1089           | Oil Pressure Indicator               |
| 5934               | Pressure Altimeter                   |
| 120-12002-0105     | Pressure Altimeter                   |
| 120-12002-0106     | Pressure Altimeter                   |
| 120-12003          | Pressure Altimeter                   |
| 120-12003M         | Pressure Altimeter                   |
| 120-12008-13       | Pressure Altimeter                   |
| 120-12008-9        | Pressure Altimeter                   |
| 120-12009-1000     | Pressure Altimeter                   |
| 120-12009-2000     | Pressure Altimeter                   |
| 135-1350           | Pressure Altimeter                   |
| 135-13502-0201     | Pressure Altimeter                   |
| 135-13502-0202     | Pressure Altimeter                   |
| 135-13503M         | Pressure Altimeter                   |
| 135-13508-1        | Pressure Altimeter                   |
| 135-135208-5       | Pressure Altimeter                   |
| 135-13522-1000     | Pressure Altimeter                   |
| 135-13522-1100     | Pressure Altimeter                   |
| 5934-1             | Pressure Altimeter                   |
| 5934-3             | Pressure Altimeter                   |
| 5934A-1            | Pressure Altimeter                   |

## Instruments

### Instruments continued

| PART NUMBER     | DESCRIPTION                    |
|-----------------|--------------------------------|
| 5934A-3         | Pressure Altimeter             |
| 5934AD-1        | Pressure Altimeter             |
| 5934AD-3        | Pressure Altimeter             |
| 5934AM-1        | Pressure Altimeter             |
| 5934AM-3        | Pressure Altimeter             |
| 5934D-1         | Pressure Altimeter             |
| 5934D-3         | Pressure Altimeter             |
| 5934M-1         | Pressure Altimeter             |
| 5934M-3         | Pressure Altimeter             |
| 5934P-1         | Pressure Altimeter             |
| 5934P-3         | Pressure Altimeter             |
| 5934PA-1        | Pressure Altimeter             |
| 5934PA-3        | Pressure Altimeter             |
| 5934PAD-1       | Pressure Altimeter             |
| 5934PAD-3       | Pressure Altimeter             |
| 5934PAM-1       | Pressure Altimeter             |
| 5934PAM-3       | Pressure Altimeter             |
| 5934PD-1        | Pressure Altimeter             |
| 5934PD-3        | Pressure Altimeter             |
| 5934PM-1        | Pressure Altimeter             |
| 5934PM-3        | Pressure Altimeter             |
| AW1817AB11      | Pressure Gauge                 |
| 8SC0054         | Prop RPM Indicator             |
| SEL-OC29DF      | Prop RPM Indicator             |
| SEL-OC29DH      | Prop RPM Indicator             |
| 622-1204 Series | Radio Altimeter Indicator      |
| 2592920 Series  | Radio Deviation Indicator      |
| 622-2506-006    | RMI                            |
| SED-LOC29M      | RPM Indicator                  |
| 4349-150-80-10  | Rudder Trim Position Indicator |
| KA-51A          | Slaving Accessory              |
| 34107C1AG13-1A3 | Tachometer Indicator           |
| 34108C1AF13-1A3 | Tachometer Indicator           |
| 3571260-7001    | Tachometer Indicator           |

## Instruments

### Instruments continued

| PART NUMBER  | DESCRIPTION          |
|--------------|----------------------|
| 3571260-8002 | Tachometer Indicator |
| 8DJ81 LAZ2   | Tachometer Indicator |
| 8DJ81AAA1    | Tachometer Indicator |
| 8DJ81AAB1    | Tachometer Indicator |
| 8DJ81AAC1    | Tachometer Indicator |
| 8DJ81BAA1    | Tachometer Indicator |
| 8DJ81CAA1    | Tachometer Indicator |
| 8DJ81CAA2    | Tachometer Indicator |
| 8DJ81CAB2    | Tachometer Indicator |
| 8DJ81CACA1   | Tachometer Indicator |
| 8DJ81CACA2   | Tachometer Indicator |
| 8DJ81CAE1    | Tachometer Indicator |
| 8DJ81CAE2    | Tachometer Indicator |
| 8DJ81CAF1    | Tachometer Indicator |
| 8DJ81CAF2    | Tachometer Indicator |
| 8DJ81CAH1    | Tachometer Indicator |
| 8DJ81CAH2    | Tachometer Indicator |
| 8DJ81CAK1    | Tachometer Indicator |
| 8DJ81CAK2    | Tachometer Indicator |
| 8DJ81CAL1    | Tachometer Indicator |
| 8DJ81CAM1    | Tachometer Indicator |
| 8DJ81CAM2    | Tachometer Indicator |
| 8DJ81CAN1    | Tachometer Indicator |
| 8DJ81CAN2    | Tachometer Indicator |
| 8DJ81CAS2    | Tachometer Indicator |
| 8DJ81CAX2    | Tachometer Indicator |
| 8DJ81CAY2    | Tachometer Indicator |
| 8DJ81CAZ2    | Tachometer Indicator |
| 8DJ81CBA2    | Tachometer Indicator |
| 8DJ81CBB2    | Tachometer Indicator |
| 8DJ81CBK2    | Tachometer Indicator |
| 8DJ81CBX2    | Tachometer Indicator |
| 8DJ81CCK2    | Tachometer Indicator |
| 8DJ81CCL2    | Tachometer Indicator |

## Instruments

### Instruments continued

| PART NUMBER | DESCRIPTION          |
|-------------|----------------------|
| 8DJ81CCM2   | Tachometer Indicator |
| 8DJ81CDC2   | Tachometer Indicator |
| 8DJ81CDE2   | Tachometer Indicator |
| 8DJ81CDY2   | Tachometer Indicator |
| 8DJ81FAA1   | Tachometer Indicator |
| 8DJ81FAA2   | Tachometer Indicator |
| 8DJ81LAA1   | Tachometer Indicator |
| 8DJ81LAA2   | Tachometer Indicator |
| 8DJ81LAB2   | Tachometer Indicator |
| 8DJ81LAC1   | Tachometer Indicator |
| 8DJ81LAC2   | Tachometer Indicator |
| 8DJ81LAD1   | Tachometer Indicator |
| 8DJ81LAD2   | Tachometer Indicator |
| 8DJ81LAE1   | Tachometer Indicator |
| 8DJ81LAE2   | Tachometer Indicator |
| 8DJ81LAK1   | Tachometer Indicator |
| 8DJ81LAK2   | Tachometer Indicator |
| 8DJ81LAN2   | Tachometer Indicator |
| 8DJ81LAT1   | Tachometer Indicator |
| 8DJ81LAT2   | Tachometer Indicator |
| 8DJ81LAV2   | Tachometer Indicator |
| 8DJ81LAW1   | Tachometer Indicator |
| 8DJ81LAW2   | Tachometer Indicator |
| 8DJ81LAX2   | Tachometer Indicator |
| 8DJ81LAY2   | Tachometer Indicator |
| 8DJ81LBC2   | Tachometer Indicator |
| 8DJ81LBD2   | Tachometer Indicator |
| 8DJ81LBE2   | Tachometer Indicator |
| 8DJ81LBF2   | Tachometer Indicator |
| 8DJ81LBH2   | Tachometer Indicator |
| 8DJ81LBK2   | Tachometer Indicator |
| 8DJ81LBL2   | Tachometer Indicator |
| 8DJ81LBS2   | Tachometer Indicator |
| 8DJ81LBT2   | Tachometer Indicator |

## Instruments

### Instruments continued

| PART NUMBER | DESCRIPTION          |
|-------------|----------------------|
| 8DJ81LBX2   | Tachometer Indicator |
| 8DJ81LCB2   | Tachometer Indicator |
| 8DJ81LCD2   | Tachometer Indicator |
| 8DJ81LCF2   | Tachometer Indicator |
| 8DJ81LCK2   | Tachometer Indicator |
| 8DJ81LWA1   | Tachometer Indicator |
| 8DJ81LWA2   | Tachometer Indicator |
| 8DJ81LWB2   | Tachometer Indicator |
| 8DJ81LWC2   | Tachometer Indicator |
| 8DJ81LWH2   | Tachometer Indicator |
| 8DJ81LWM2   | Tachometer Indicator |
| 8DJ81LWN2   | Tachometer Indicator |
| 8DJ81LWR2   | Tachometer Indicator |
| 8DJ81LWS2   | Tachometer Indicator |
| 8DJ81LWT2   | Tachometer Indicator |
| 8DJ81LWV2   | Tachometer Indicator |
| 8DJ81LWY2   | Tachometer Indicator |
| 8DJ81LWZ2   | Tachometer Indicator |
| 8DJ81LXC2   | Tachometer Indicator |
| 8DJ81LXD2   | Tachometer Indicator |
| 8DJ81LXE2   | Tachometer Indicator |
| 8DJ81LXF2   | Tachometer Indicator |
| 8DJ81LXG2   | Tachometer Indicator |
| 8DJ81LXH2   | Tachometer Indicator |
| 8DJ81LXK2   | Tachometer Indicator |
| 8DJ81LXL2   | Tachometer Indicator |
| 8DJ81LXM2   | Tachometer Indicator |
| 8DJ81LXN2   | Tachometer Indicator |
| 8DJ81LXP2   | Tachometer Indicator |
| 8DJ81LXT2   | Tachometer Indicator |
| 8DJ81LXV2   | Tachometer Indicator |
| 8DJ81LXW2   | Tachometer Indicator |
| 8DJ81LXY2   | Tachometer Indicator |
| 8DJ81LXZ2   | Tachometer Indicator |

## Instruments

### Instruments continued

| PART NUMBER  | DESCRIPTION               |
|--------------|---------------------------|
| 8DJ81LYA2    | Tachometer Indicator      |
| 8DJ81LYB2    | Tachometer Indicator      |
| 8DJ81LYC2    | Tachometer Indicator      |
| 8DJ81LYP2    | Tachometer Indicator      |
| 8DJ81LYT2    | Tachometer Indicator      |
| 8DJ81LYV2    | Tachometer Indicator      |
| 8DJ81LYW2    | Tachometer Indicator      |
| 8DJ81LYX2    | Tachometer Indicator      |
| 8DJ81LYZ2    | Tachometer Indicator      |
| 8DJ81LZB2    | Tachometer Indicator      |
| 8DJ81LZC2    | Tachometer Indicator      |
| 8DJ81LZE2    | Tachometer Indicator      |
| 8DJ81LZF2    | Tachometer Indicator      |
| 8DJ81WAG2    | Tachometer Indicator      |
| C6SC1029-3   | Tachometer Indicator      |
| 152B206      | Temperature Indicator     |
| 163B103      | Temperature Indicator     |
| 163B103A     | Temperature Indicator     |
| 163B103B     | Temperature Indicator     |
| C6SC1085-5   | Temperature Indicator     |
| CSC1030-9    | Temperature Indicator     |
| 8SC0053      | Torque Indicator          |
| SEL-OC12F    | Torque Indicator          |
| SELOC2N      | Torque Indicator          |
| 217-03221    | Torque Pressure Indicator |
| 217-09261    | Torque Pressure Indicator |
| 217-09261    | Torque Pressure Indicator |
| C6SC1026-1   | Torque Pressure Indicator |
| C6SC1090     | Torque Pressure Indicator |
| 1234T100-7TZ | Turn & Slip Indicator     |
| 1234T100-7Z  | Turn & Slip Indicator     |
| 1234T101-3Z  | Turn & Slip Indicator     |
| 1234T101-3ZB | Turn & Slip Indicator     |
| 1234T101-7Z  | Turn & Slip Indicator     |

## Instruments

### Instruments continued

| PART NUMBER   | DESCRIPTION              |
|---------------|--------------------------|
| 1234T101-7ZP  | Turn & Slip Indicator    |
| 58-380094-9   | Turn & Slip Indicator    |
| C661003-0506  | Turn & Slip Indicator    |
| M5000-08      | Turn & Slip Indicator    |
| M5000-10      | Turn & Slip Indicator    |
| PS50030-3-5   | Turn & Slip Indicator    |
| RCA 12        | Turn & Slip Indicator    |
| RCA 15AK      | Turn & Slip Indicator    |
| RCA 15BK      | Turn & Slip Indicator    |
| RCA 28        | Turn & Slip Indicator    |
| RCA15C        | Turn & Slip Indicator    |
| RCACM         | Turn & Slip Indicator    |
| 1394100-10RA  | Turn and Bank            |
| 1394100-10RB  | Turn and Bank            |
| 1394100-12RA  | Turn and Bank            |
| 1394100-12RB  | Turn and Bank            |
| 1394100-12RB  | Turn and Bank            |
| 1394100-3A    | Turn and Bank            |
| 1394100-3AC   | Turn and Bank            |
| 1394100-3B    | Turn and Bank            |
| 1394100-3BC   | Turn and Bank            |
| 1394100-7A    | Turn and Bank            |
| 1394100-7B    | Turn and Bank            |
| 1394100-7RB   | Turn and Bank            |
| 1394100-8RA   | Turn and Bank            |
| 1394100-8RB   | Turn and Bank            |
| 1394T100-14RB | Turn and Bank            |
| EA1403-1-ACA  | Vertical Speed Indicator |
| EA1403-1-GAF  | Vertical Speed Indicator |
| EA1403-1-ROB  | Vertical Speed Indicator |
| EA1403-1-TAC  | Vertical Speed Indicator |
| EA1403-1ZL    | Vertical Speed Indicator |
| EA1403-1Z-ROB | Vertical Speed Indicator |
| EA1403-2Z     | Vertical Speed Indicator |

Instruments

Instruments continued

| PART NUMBER    | DESCRIPTION              |
|----------------|--------------------------|
| EA1403-3Z-CES  | Vertical Speed Indicator |
| EA1403-4Z-AA   | Vertical Speed Indicator |
| EA1403-5Z      | Vertical Speed Indicator |
| EA1403-6ZGAF   | Vertical Speed Indicator |
| EA1403-8Z-PA   | Vertical Speed Indicator |
| EA1407Z-SAB    | Vertical Speed Indicator |
| EA1409-1-ACA   | Vertical Speed Indicator |
| EA1409-1Z      | Vertical Speed Indicator |
| EA1409-1Z      | Vertical Speed Indicator |
| EA1409-1ZL-BEL | Vertical Speed Indicator |
| EA1409-2Z-CES  | Vertical Speed Indicator |
| EA1409-2ZL     | Vertical Speed Indicator |
| EA1409-3Z      | Vertical Speed Indicator |
| EA1409-4Z-CES  | Vertical Speed Indicator |
| 7000 Series    | Vertical Speed Indicator |
| 7000 Series    | Vertical Speed Indicator |

# Radio

8 entries

Radio

| PART NUMBER     | DESCRIPTION                      |
|-----------------|----------------------------------|
| 1U396-0002      | Audio Select Box                 |
| 1442710         | Headset                          |
| DHC60 Series    | Audio Control Units              |
| 066-1055 Series | Audio Selector/Interphone System |
| 622-2855 Series | Radio Altimeter                  |
| 622-1270-001    | TDR-90 Transponder               |
| AIR 3100        | Headset                          |
| AIR 3100L       | Headphone                        |